


## INSTALLATION INSTRUCTIONS

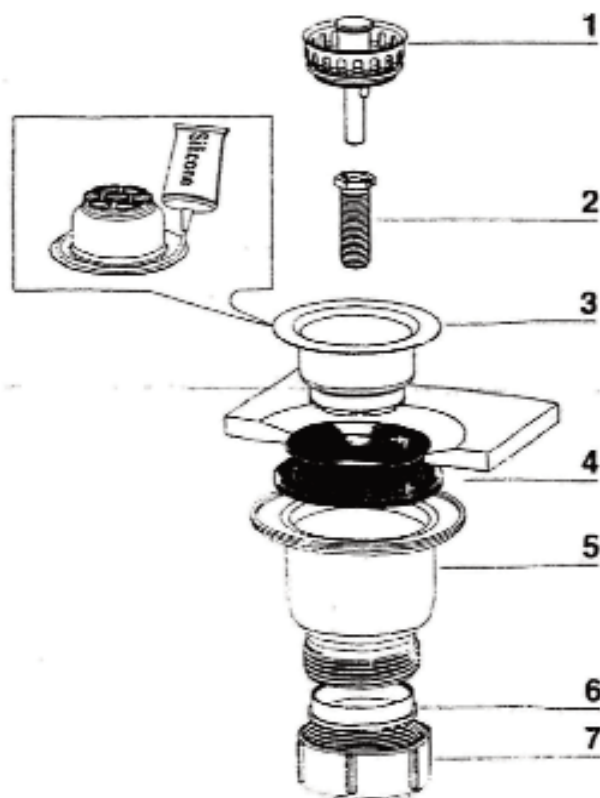

- ① REMOVE THE BASKET 1 FROM THE DRAIN ASSEMBLY.
- ② APPLY A SMALL AMOUNT OF NON-ACID SILICONE UNDER THE RIM OF STRAINER FLANGED AND PUSH DOWN INTO SINK.
- ③ FROM UNDER THE SINK SLIDE THE WASHER 4 OVER THE FLANGE 3 THROUGH THE SINK HOLE.
- ④ PLACE FERRULE 2 INTO THE HOLE IN FLANGE 3.
- ⑤ PLACE BODY 5 FROM UNDER THE SINK OVER WASHER 4.
- ⑥ TIGHTEN FERRULE 2 SNUG PLUS ONE QUARTER TURN MAXIMUM.
- ⑦ SLIDE NUT 7 OVER TAILPIECE TUBE.
- ⑧ SLIDE WASHER 6 OVER TAILPIECE TUBE.
- ⑨ TIGHTEN ROUND NUT 7 HAND TIGHT.
- ⑩ PLACE BASKET 1 INTO FERRULE AND TEST FOR LEAKS.

## FINISH CARE AND MAINTENANCE

DO NOT USE ANY HARSH ACID BASED DETERGENTS OR CLEANERS SUCH AS SIF, SCRUB, SCOURING BUBBLES OR COMET TO CLEAN. USE ONLY A DAMP SOFT CLOTH. STANDARD Windex CAN ALSO BE USED SPARINGLY. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PRESERVE FINISH.

## WARRANTY

CONTACT BARCLAY FOR WARRANTY INFORMATION. CLAIMS REQUIRE PROOF OF PURCHASE.